

# **IDB-HCS12C Evaluation Board For Motorola MC9S12C32**

## **User's Manual**

---

### **1. Introduction**

---

#### **Overview**

The IDB-HCS12C Evaluation Board demonstrates the capabilities of the 80-pin MC9S12C32 device. The IDB-HCS12C Evaluation Board can be used as a standalone application or with an emulator system, such as inDART-HCS12, through a standard BDM connection.

#### **Board Features**

The IDB-HCS12C Evaluation Board has the following hardware features:

1. An "MCU" section containing:
  - An MC9S12C32 microcontroller (in QFP80 package);
  - A connector area to access the I/O pins of the microcontroller for expansion prototyping;
  - A 16-MHz oscillator, together with a jumper for the oscillator source selection.
2. An "MCU SETTINGS" section which defines the MCU operating mode upon reset;



Copyright © 2003 SofTec Microsystems®  
DC00677

#### **SofTec Microsystems**

E-mail (general information): [info@softecmicro.com](mailto:info@softecmicro.com)  
E-mail (marketing department): [marketing@softecmicro.com](mailto:marketing@softecmicro.com)  
E-mail (technical support): [support@softecmicro.com](mailto:support@softecmicro.com)  
Web: <http://www.softecmicro.com>

#### **Important**


SofTec Microsystems reserves the right to make improvements to its products, their documentation and software routines, without notice. Information in this manual is intended to be accurate and reliable. However, SofTec Microsystems assumes no responsibility for its use; nor for any infringements of rights of third parties which may result from its use.

SOFTEC MICROSYSTEMS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF.

#### **Trademarks**

inDART is a trademark of SofTec Microsystems.  
Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation.  
PC is a registered trademark of International Business Machines Corporation.  
Other products and company names listed are trademarks or trade names of their respective companies.

3. An "ATD REFERENCE" section which allows you to define the high and low threshold for the MCU internal A/D converter;
4. A "RESET" section containing the LVD circuitry and a push-button connected to the MCU RESET pin;
5. A "BDM" section, containing a standard BDM connector for in-circuit debugging/programming plus an additional connector for advanced debugging (MODA, MODB, ECLK);
6. An "RS-232" section providing a D-SUB 9-pin female connector together with two jumpers to connect/disconnect the RXD0 and TXD0 pins to/from the RS-232 circuitry;
7. An "INPUTS" section containing:
  - Four push-buttons, connected to PP0, PP1, PP2 and PP3;
  - Eight general-purpose DIP-switched connected to Port T;
  - A potentiometer, together with a jumper to connect/disconnect it to/from PAD00.
8. An "OUTPUTS" section containing eight high-efficiency (low-current) LEDs connected to Port B, together with eight jumpers to connect/disconnect each of the eight LEDs to/from their respective Port B pins;
9. A "POWER SUPPLY" section containing a connector for a 9-12 V, 500 mA (unregulated) power supply plus an auxiliary connector for a 5 V (max., regulated) power supply, together with a jumper to select the power supply source;
10. A prototyping area.

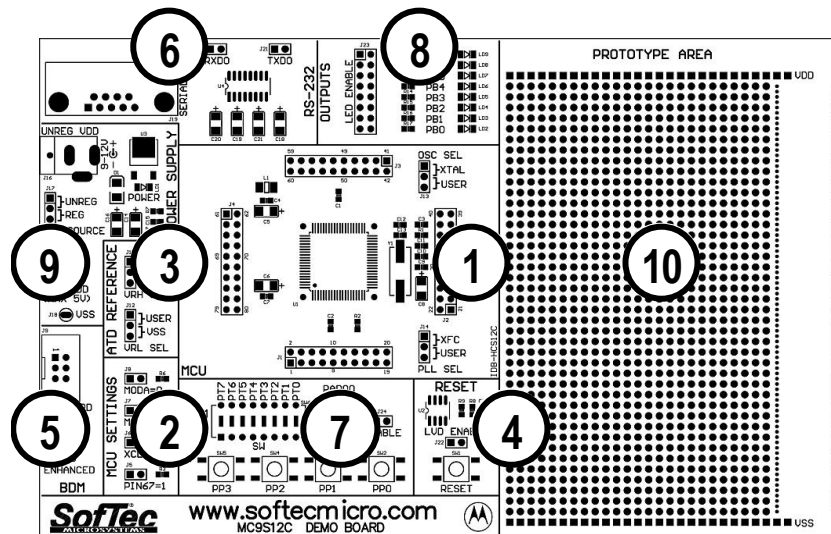

The IDB-HCS12C Demo Board

### Recommended Reading

Motorola MC9S12C32 Device User Guide;  
 Motorola HCS12 Core User Guide, and all of the MC9S12C32 individual "Block User Guides";  
 inDART-HCS12 User's Manual.

## 2. Getting Started

### Overview

The IDB-HCS12C Evaluation Board may be used as a standalone application or with a BDM-based emulator/programmer (host mode).

### Powering Up the Board

The IDB-HCS12C Evaluation Board can be powered either via the "UNREG VDD" connector (J16) or the "REG VDD" connector (J15).

- The "UNREG VDD" connector accepts 9-12 V DC, 500 mA wall plug-in power supply with a 2.1 mm pin and sleeve plug with positive in the center and sleeve as ground. When powering the board through this connector, make sure the "VDD SOURCE" jumper (J17) selects the "UNREG" position. The "UNREG VDD" voltage is internally regulated to 5 V DC.
- The "REG VDD" connector accepts 5 V DC (max.) When powering the board through this connector, make sure the "VDD SOURCE" jumper (J17) selects the "REG" position. The "REG VDD" voltage directly powers the microcontroller and the rest of the board. The "REG VDD" connector has been designed to be used together with inDART-HCS12.


### Running the Example


The IDB-HCS12C Evaluation Board can be used in conjunction with a BDM-based emulator/programmer, such as SofTec Microsystems inDART-HCS12 In-Circuit Debugger/Programmer or a Motorola development tool.

If you use the evaluation board with SofTec Microsystems inDART-HCS12, a sample application is available, where the program execution is controlled by the host PC. You can use the PC, additionally, to debug the application by, for example, execute the program step by step and watching how the microcontroller registers vary, by using the Metrowerks CodeWarrior HC12 IDE provided with inDART-HCS12. Please refer to the inDART-HCS12 user's manual for a step-by-step tutorial.




## 3. Hardware Reference

### "MCU" Section

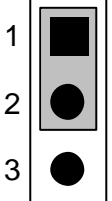
	<p><b>J13 – OSC SEL</b></p> <p><b>1-2 Enables on-board oscillator (default)</b> 2-3 User-provided clock (to EXTAL pin)</p>
---	--

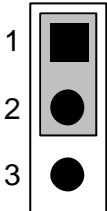
	<p><b>J14 – PLL SEL</b></p> <p>1-2 <b>Enables on-board PLL filter (default)</b> 2-3 User-provided PLL filter (to XFC pin)</p>
---	---

### “POWER SUPPLY” Section

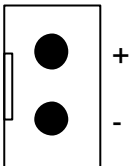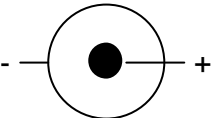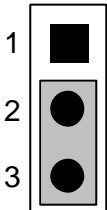

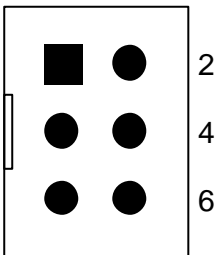

	<p><b>J15 – REG VDD</b></p> <p>Input: 5 V DC (max.) No internal regulator used.</p>
	<p><b>J16 – UNREG VDD</b></p> <p>Input: 9-12 V DC (500 mA max.) Internally regulated to 5 V DC.</p>
	<p><b>J17 – VDD SOURCE</b></p> <p>1-2 Use the “UNREG VDD” connector (J16) 2-3 Use the “REG VDD” connector (J15) (default)</p>
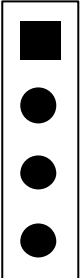
### “BDM” Section


	<p><b>J9 – STANDARD BDM CONNECTOR</b></p> <p>1 BKGD 2 GND 3 N.C. 4 RESET# 5 N.C. 6 VDD</p>
---	--


	<p><b>J10 – ENHANCED BDM CONNECTOR</b></p> <p>1 MODA 2 MODB 3 ECLK 4 VSS</p>
---	--

### “MCU SETTINGS” Section




	<p><b>J5 – PIN67=1</b></p> <p>Installed: <b>PIN67 (ROMCTL) pin pulled to VDD via 10K (default)</b> Not Installed: PIN67 pin N.C. (user)</p>
	<p><b>J6 – XCLKS=1</b></p> <p>Installed: <b>XCLKS# pin pulled to VDD via 10K (default)</b> Not Installed: XCLKS# pin N.C. (user)</p>
	<p><b>J7 – MODB=0</b></p> <p>Installed: <b>MODB pin pulled to VSS via 10K (default)</b> Not Installed: MODB pin N.C.</p>
	<p><b>J8 – MODA=0</b></p> <p>Installed: <b>MODA pin pulled to VSS via 10K (default)</b> Not Installed: MODA pin N.C.</p>
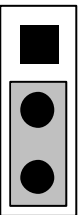
### “ATD REFERENCE” Section

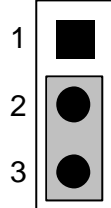
	<p><b>J11 – VRH SEL</b></p> <p>1-2 VRH pin N.C. (user) 2-3 <b>VRH pin connected to VDDA pin (default)</b></p>
---	---

	<p><b>J12 – VRL SEL</b></p> <p>1-2 VRL pin N.C. (user)  <b>2-3 VRL pin connected to VSS (default)</b></p>
---	---


**“RS-232” Section**

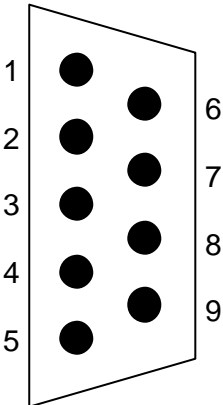	<p><b>J20 – RX ENABLE</b></p> <p>Installed: <b>RXD0 pin used by RS-232 circuitry (default)</b>                  Not Installed: RXD0 pin N.C. (user)</p>																		
	<p><b>J21 – TX ENABLE</b></p> <p>Installed: <b>TXD0 pin used by RS-232 circuitry (default)</b>                  Not Installed: TXD0 pin N.C. (user)</p>																		
	<p><b>J19 – RS-232 CONNECTOR</b>                  (Note: RS-232 functionality is guaranteed only if the target microcontroller is powered at 5 V).</p> <table border="0"> <tr><td>1</td><td>N.C.</td></tr> <tr><td>2</td><td>TX</td></tr> <tr><td>3</td><td>RX</td></tr> <tr><td>4</td><td>N.C.</td></tr> <tr><td>5</td><td>VSS</td></tr> <tr><td>6</td><td>N.C.</td></tr> <tr><td>7</td><td>N.C.</td></tr> <tr><td>8</td><td>N.C.</td></tr> <tr><td>9</td><td>N.C.</td></tr> </table>	1	N.C.	2	TX	3	RX	4	N.C.	5	VSS	6	N.C.	7	N.C.	8	N.C.	9	N.C.
1	N.C.																		
2	TX																		
3	RX																		
4	N.C.																		
5	VSS																		
6	N.C.																		
7	N.C.																		
8	N.C.																		
9	N.C.																		


**“RESET” Section**


	<p><b>J22 – LVD ENABLE</b></p> <p>Installed: <b>RESET pin used by LVD circuitry (default)</b>                  Not Installed: RESET pin N.C. (user)</p>
---	---

**“INPUTS” Section**


	<p><b>J24 – POTENTIOMETER ENABLE</b></p> <p><b>Installed:</b> Potentiometer connected to <b>PAD00 pin (default)</b></p> <p><b>Not Installed:</b> PAD00 pin N.C. (user)</p>
---	--

**“OUTPUTS” Section**

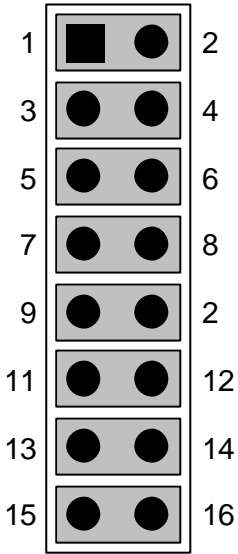
	<p><b>J23 – LED ENABLE</b></p> <p><b>Each jumper, when installed, connects a LED to the respective PBx pin.</b></p> <p><b>When a jumper is not installed, the respective PBx pin is N.C. (user).</b></p>
--	--

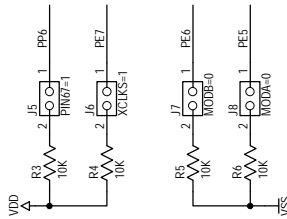


**MCU SETTINGS**

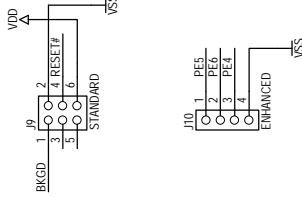


**BDM**

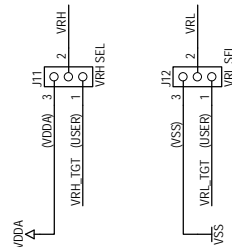


**ATD REFERENCE**

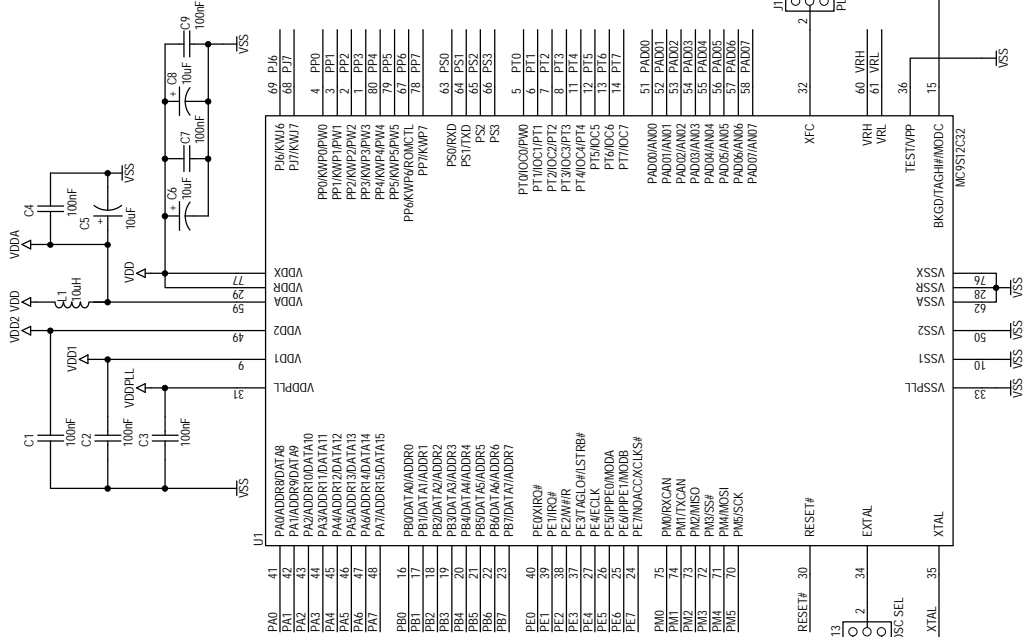


**MCU**

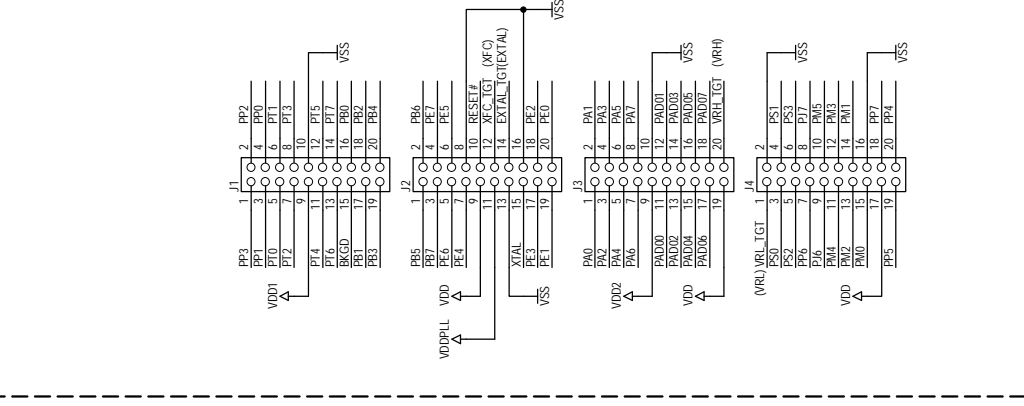


**SIGNAL PINS**

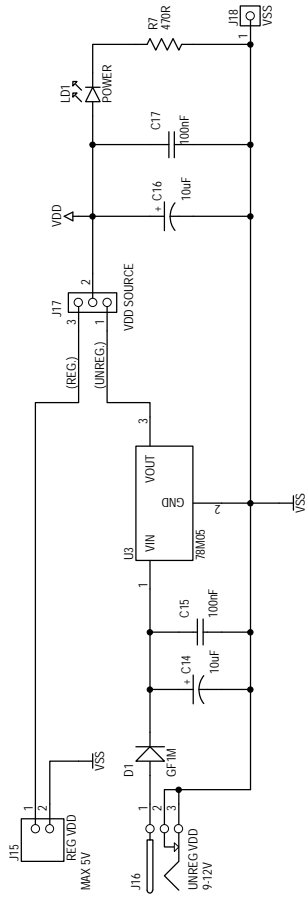


### POWER SUPPLY

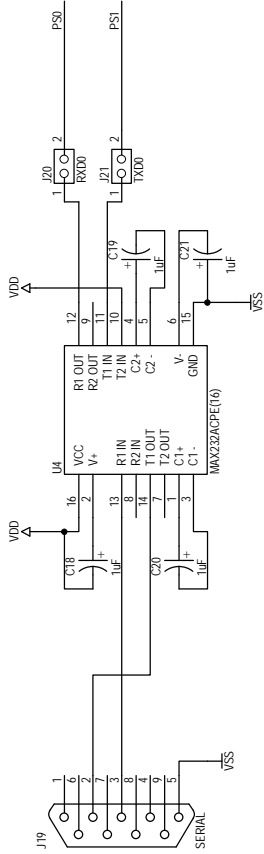


### RS-232

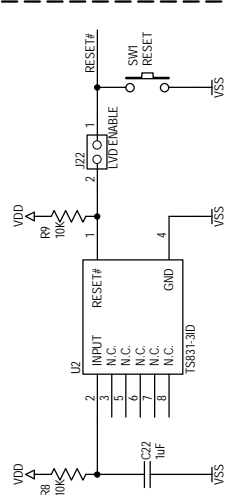

### RESET

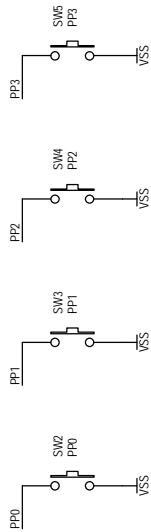

### INPUTS

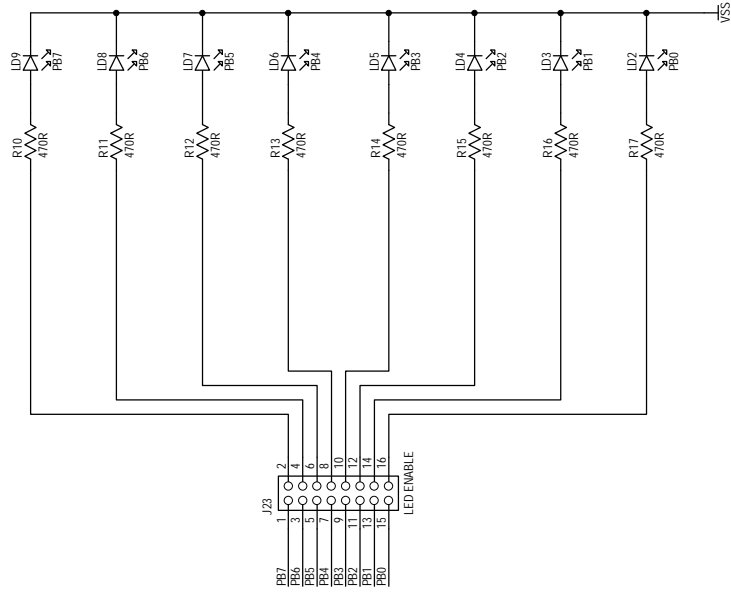

### OUTPUTS